Specifications for the Technovision AC1 controller.

AC1 Connectors:

AC1 BACK





RS232 connector



PIN#	RS232 signal
2	RS232 OUTPUT from AC1
3	RS232 I NPUT to AC1
5	RS232 GROUND

Keypad connector



PIN #	Description
1	GROUND
2	Return 0
3	Return 1
4	Return 2
5	Return 3
6	Scan 0
7	Scan 1
8	Scan 2
9	Scan 3

For more information contact:
Technovision Interactive Inc.
www.technovision.com