

Technovision

TV-66K

KEY34 firmware

Quick Reference Guide
06-2009

Technovision
1845 Sandstone Manor, #2
Pickering, Ontario
L1W 3X9
P:(905) 420-5153
F:(905) 420-0753
www.technovision.com

Installation Instruction:


- Make sure the power to the DV-66/75 player is OFF before attaching the TV-66K.
- Connect the TV66K control cable (RJ11-RJ11) to the IO port of the DV-66/75.
- Connect the other end of the cable to connector P1 on the TV66K.

TV66K DIP switches (DEFAULT = ON)

- DIP 1 **ON** = 3x4 KEYPAD being used
OFF = Buttons being used (12 tracks)
- DIP 2 **ON** = 2-digit entry (01..99)
OFF = single digit entry (1..10)
- DIP 3 **ON** = "*" = VOL- and "#" = VOL+
OFF = "*" = PREV and "#" = NEXT

Using a NIN34


The TV66K must be installed with a 7-conductor keypad connector to use a NIN34 keypad.

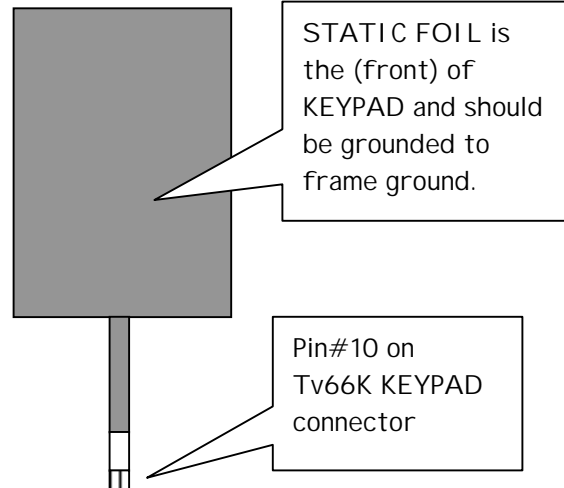

Using a KEY34

- Attach the optional K34 cable to the back of the KEY34 keypad so that the cable faces down.

BACK OF KEY34

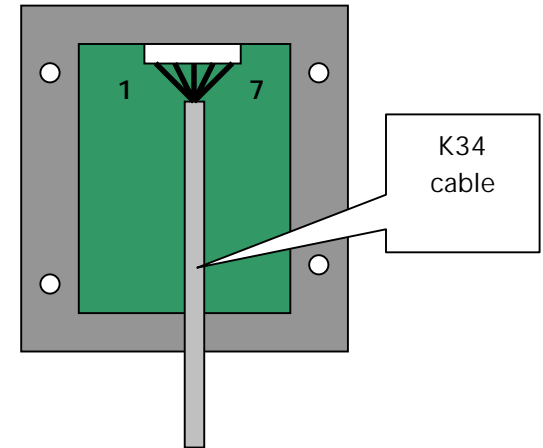

Colour	TV66K terminal	KEY34 Pin	Function
ORANGE	10	1	Scan2
RED	9	2	Scan1
BROWN	8	3	Scan0
BLACK	7	4	Return3
WHITE	6	5	Return2
BLUE	5	6	Return1
GREEN	4	7	Return0